

Troubleshooting: Screen Flicker

This document contains information about your HP Digital Entertainment Center regarding conditions that may cause the screen to flicker.

If the TV or display connection uses composite video or S-video, you may see the screen flicker when:

- You turn on or restart the HP Digital Entertainment Center. (The screen flicker may occur and continue until the initial startup completes and the Media Center or desktop appears.)
- You select the Display Settings, open the Display Properties, or use the screen adjustment option. (The screen flicker may occur and continue until you close the window.)

This type of screen flicker occurs normally, and appears while the operating system obtains and processes display resolution information.

Copyright © 2005 Hewlett-Packard Development Company, L.P.

Printed in

